



Parts List:


- A.) Feet (4)
- B.) Large Washer (1)
- C.) Connecting Bolt (1)
- D.) Small Washers (4)
- E.) Nuts (4)
- F.) Allen Wrench (1)
- G.) Hex Screws (2)
- H.) Table Base (1)
- I.) Pump Base (1)
- J.) Grooming Arm (1)
- K.) Tabletop (1)
- L.) Pump Lever (1)

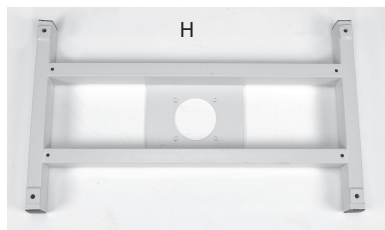


1. Attach the Feet (A) to the bottom of the Table Base (H).

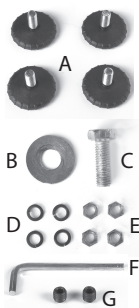

2. Attach the Pump Lever (L) to the Pump Base (I). Use the two Hex Screws (G) and the Allen Wrench (F) to secure Pump Lever (L) to Pump Base (I). The Hex Screws (G) should be slotted into the holes on the outer ends of the Pump Lever (L).

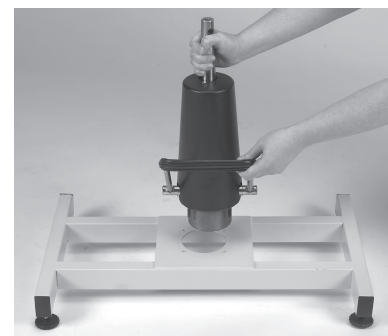


3. Attach Hydraulic Pump (I & L) to the Table Base (H) by slotting the four bolts on the Pump through the holes in the Table Base.

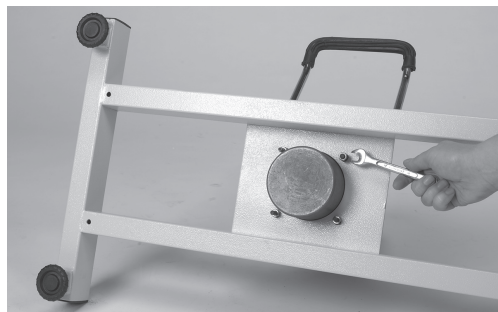


4. Secure Pump (I & L) to Table Base (H) using four Small Washers (D) and four Nuts (E). Tighten with a Standard Wrench (not included).



5. Fit the Tabletop (K) onto the top of the Hydraulic Pump (I & L).

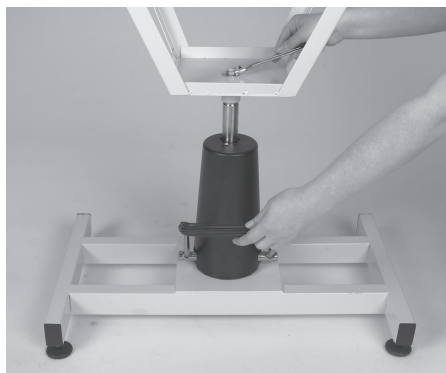

6. Secure Tabletop (K) to Hydraulic Pump (I & L) using Large Washer (B) and Connecting Bolt (C). Push up on the Pump Lever (L) while securing Connecting Bolt (C) to Pump.

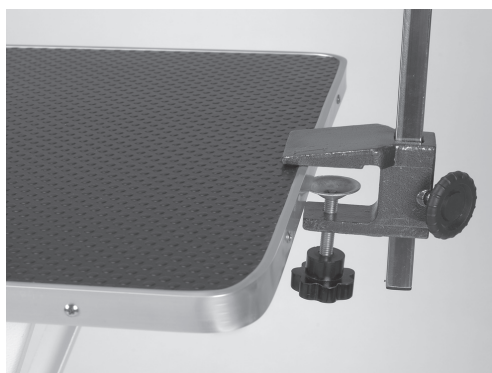

7. Attach Grooming Arm (J) to Tabletop (K). Use the bottom turn knob on the arm to adjust the width of the clamp. The upper turn knob adjusts the height of the arm.



LIMITED WARRANTY

This Master Equipment™ Value-Lift Hydraulic Table is warranted against defective material or workmanship for one year from the date of purchase. Any Master Equipment™ product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact PetEdge Customer Service at 1-800-638-5754 regarding any defective product. PetEdge will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. PetEdge will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than PetEdge or has been subject to unreasonable use. Warranty is valid in the United States.

Date Purchased: _____

TP107010 Master Equipment™ Value-Lift Hydraulic Table

Manufactured for / Fabricado para / Fabriqué pour
©Tops Pet Products, Beverly, MA 01915
Made in / Hecho en / Fabriqué à China